

The World of Bookbinding.

PräColl

Fanbinder

The **PräColl** is a semi-automatic adhesive-binding system for fanbinding one-off and multiple book blocks.

The machine is characterized by the following **features**:



- + for the production of book blocks with flat and rounded backs
- + guide cog-wheel ensures even glue application
- + no accidental slipping of the endsheets
- + fanning out the sheets during the gluing process ensures a strong durability of the binding
- + excellent lay-flat characteristics
- + no curly paper when using art paper

Technical data:

Floor space:	75 x 62 cm
Height:	approx. 140 cm
Weight:	approx. 70 kgs
Power supply:	230 Volt / 50 Hz (A.C.)

Book block sizes:

Block width:	110 - 450 mm
Block height:	up to 345 mm
Block thickness:	up to 82 mm
Output:	approx. 60 blocks/ h

Subject to technical alteration.

The World of Bookbinding.

PräColl

The **PräColl** is a semi-automatic adhesive-binding system for fanbinding one-off and multiple book blocks. Different block sizes do not require any adjustment on the machine. It is therefore extremely suitable for binding assortment books with a high output.

It is delivered with a set of different rounding blocks for the production of book blocks with rounded backs.

The sheets to be bound are inserted into the pressing device with their back facing downwards to ensure that all pages are in a correct position for gluing.

They are now fixed with a drying clamp, which is then placed on the swivel arm and locked. For gluing, the swivel arm is pressed against the roller of the gluing machine. After gluing, the book block remains in the clamp for drying.

Option:

- Additional drying clamps to glue and dry the book blocks

Applications:



hardcover books with flat and rounded backs





library books




bibles



hymnals

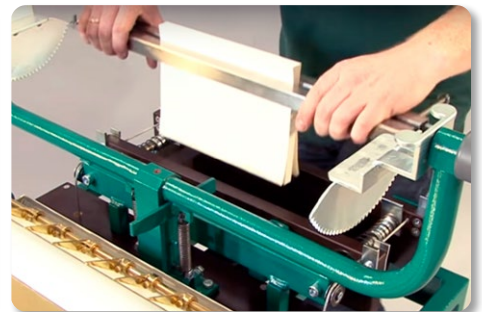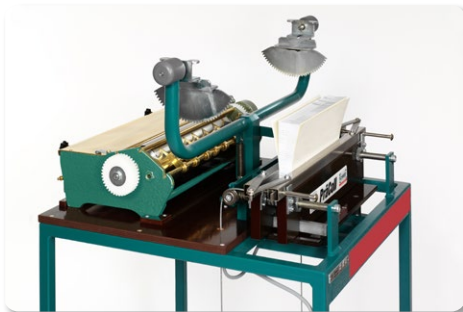

More on  www.youtube.com/hhschmedt