

PräziCoat

Gluing machine

The **PräziCoat** is a solid two-roller gluing machine for both cold and hot glue.

It is available in three sizes:

PräziCoat 400 - 400 mm roller width

PräziCoat 520 - 520 mm roller width

PräziCoat 720 - 720 mm roller width

The machine is characterized by the following features:



- for hot and cold glue
- extremely quiet and vibration-free running by means of belt drive
- very even glue application
- easy cleaning
- automatic water feed (optional)
- rollers table and tray made of stainless steel
- electric continuous speed control
- electric continuous temperature control
- high grammages may be processed by means of two overlying pressure rollers
- aering underneath the table to avoid condensation

Technical data:

Type	400	520	720
Dimensions (W x D x H):	77 x 62 x 40 cm	90 x 62 x 40 cm	106 x 70 x 38 cm
Weight:	75 kgs	100 kgs	140 kgs
Roller width:	40 cm	52 cm	72 cm
Power supply:	230 V - 50 Hz (A. C)		

Subject to technical alteration.

The World of Bookbinding.

PräziCoat

The **PräziCoat** is a solid two-roller gluing machine for both cold and hot glue and thanks to its belt drive, it stands out for its extremely smooth and vibration-free running. The glue layer is extremely thin and even thanks to the harmonized size and speed of the dip roller and the coating roller.

The thickness of the glue layer may be adjusted by modifying the distance of the two rollers to one another by means of a hand lever. The speed of the glue rollers is continuously adjustable.

Moreover, the **PräziCoat** is equipped with two overlying

pressure rollers so that even cardboard and board may be processed.

For processing hot glue, as required for example for the case-making with laminated cover material, the **PräziCoat** may be equipped with an optional automatic water feed (**PräVis**).

The machine may be cleaned very easily. When using hot glue, the glue tray is lowered and superfluous glue is wiped off the rollers and then rinsed with water. Then the machine is simply cooled down.

When using cold glue, the tray is filled with water and the turning rollers clean themselves.

Options:

- **PräVis** - automatic water supply device
- **Stand** - with 2 doors and on castors

- **Sheet reversing device** - to release the cover material with glued side on top

Applications:

cloth sheets


laminated cover paper


paper

cardboard

leather

miscellaneous cover materials

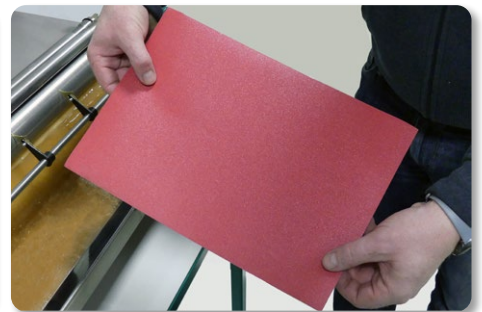

More on  www.youtube.com/hhschmedt