

PräziTrim

Board and spine trimmer

The **PräziTrim** is designed to automatically trim cover and spine boards for the production of book cases.

The machine is characterized by the following features:



- minimum set-up time
- adjustments via touchscreen
- controlled by software
- barcode system (optional)
- precise, rectangular cuts
- cover boards and spine trimmed in one work cycle
- trimmed pieces are forwarded to the operator for immediate processing (case-making)
- available as standalone model or as a component of the **Cover 1** system

Technical data:

Width:	1143 mm
Depth:	2438 mm *
* machine 863 mm, conveyor 1575 mm	
Height:	• standalone: 1753 mm • within Cover 1-System : 2438 mm
Weight:	340 kgs
Air supply:	6 bar
Power supply:	230 V - 50 Hz - 10 A

Material sizes:

Cutting width:	6 - 700 mm
Cutting height:	127 - 355 mm
Blank width:	250 - 770 mm
Blank height:	150 - 400 mm
Board thickness:	1.5 - 3.5 mm
Output:	up to 300 cycles / hour

Subject to technical alteration.

The World of Bookbinding.

PräziTrim

The **PräziTrim** is designed to automatically trim cover and spine boards for the production of book cases.

It trims the cover boards and spines out of a sheet of grey board and transports them to the operator, who places them on a pre-glued cover material

sheet. The trimming sizes are scanned via barcode or entered manually into the built-in software by means of a touchscreen or loaded from a previously created database. It may be used as a component within the **Cover 1** case-making system or as a standalone machine.

Options (already included when used within the **Cover 1 system**):

- computer
- monitor
- barcode system

Applications:



book cases



photo books and albums



menus





ring binders




one-part products (e. g. calendar backs)



asymmetric cases

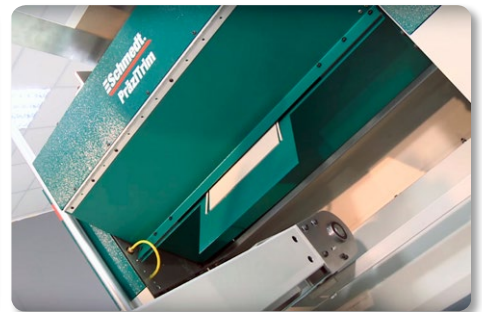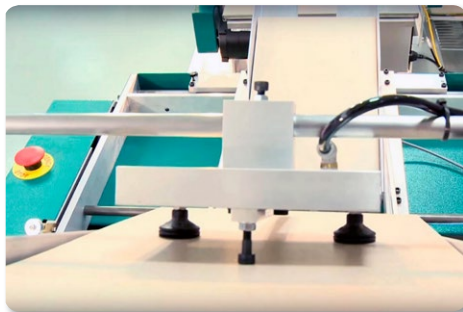

More on  www.youtube.com/hhschmedt